

# 1-Inch SuperSleeve Assembly

## Parts




Clip

Threaded  
Pin

Threaded  
Coupling



**1. Insert the top (open end) of the Hydrasleeve into the Threaded Coupling and push/pull it through. Open the top of the Sleeve.**

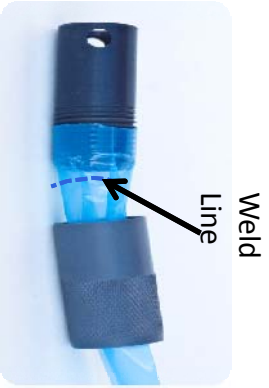

Weld  
Line

**2. Insert the male threads of the threaded pin into the open top of the Hydrasleeve. Do not insert the threads past the weld line in the Hydrasleeve. NOTE: some of the male threads will remain exposed, they will not be threaded entirely into the female portion.**



**3. GENTLY thread the pin into the coupling with the Hydrasleeve in place between the threads. It only takes a turn or two to hold it in place, DO NOT FORCE THE THREADS.**



**4. Attach clip to the holes in the top portion of the PVC Collar as seen here.**



**5. Insert second clip into the hole at the bottom of the Hydrasleeve, under the knot. Then attach an 8-ounce bullet weight to the bottom clip.**

Clip

Weight

